

FBIM

User manual

Referee Bluetooth Intercom



EJEAS

Q www.ejeas.com

About The Host



Parameter

Bluetooth version: 5.1

Audio encoding format: SBC&AAC

Support: CVC noise reduction, 3D sound

Intercom mode: 4-way intercom at the same time

Intercom distance: Up to 1500m(Distance of 4 units)

Battery parameters: 3.7V/850mAh

Power adapter: DC5V/1A

Talk time: 19H

Standby time: 260H

Charging time: 2.5H

Waterproof rating: IP65

Operating temperature range: -10~50°C

Charger specification: 3.5mm Round hole Charging

Basic

>Power on/Power off

Power on: Long press <Power on> till the indicator light flash.

Power off: Click <Power off>.

>Charge the Device

Plug the standard power adapter in 3.5mm Round hole Charging.

>Clear Pairing (Restore Factory Settings)

Long press <Volume +> & <Volume -> button at same time.

>Volume Control

Volume Up: Click <Volume +> button.

Volume Down: Click <Volume -> button.

Pairing

>2-way Intercom Pairing



Before using, please clear the pairing record.

Step 1: Turn on the two devices, both devices flash blue.

Step 2: Long press the <A button> of device 1 and the B button of device 2 for about 5s until the indicator blinks between red and blue.

Step 3: Click the <A button> of device 1. The blue light of device 1 blinks, and the search starts for device 2. Wait until the blue light of device 1 and device 2 blinks synchronously.

Step 4: Click the <A button> of device 1 to enter the intercom state.

>3-way Intercom Pairing



Step 1: Pair device 1 with device 2 as above three steps.

Step 2: Long press the <A button> of device 2 and the <B button> of device 3 for about 5s until the indicator blinks between red and blue.

Step 3: Click the <A button> of device 2. The blue light of device 2 blinks and the search starts for device 3. Wait until the blue light of device 2 and device 3 blinks synchronously.

Step 4: Click the <A button> of device 1 to enter the intercom state.

>4-way Intercom Pairing



Step 1: Pair device 1, device 2, and device 3 as above.

Step 2: Long press the <A button> on device 3 and <B button> of device 4 for about 5s until the indicator blinks between red and blue.

Step 3: Click the <A button> of device 3. The blue light of device 3 blinks and the search starts for device 4. Wait until the blue light of device 3 and device 4 blinks synchronously.

Step 4: Click the <A button> of device 1 to enter the intercom state.

➤ Pairing Reconnection

Step 1: Power on the four devices.

Step 2: Press the <A button> of device 1 twice and wait for about 10s. The four devices will automatically search for each other. After the four devices are connected, device 1 blinks red, device 2 and device 3 blinks red and blue, and device 4 blinks blue.

Attentions

1. Please use the standard charger to ensure the battery life.
2. To prevent FBIM from rain and water, the headset should be fully inserted in.

