 


Q2

USER MANUAL

 
Motorcycle Intercom System

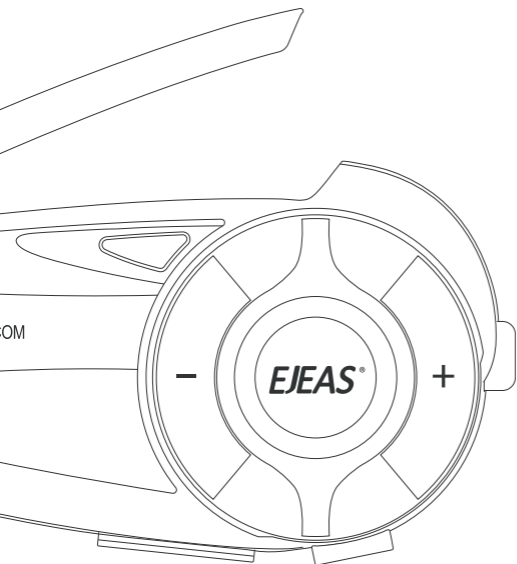

EJEAS


Q www.ejeas.com

Product Details

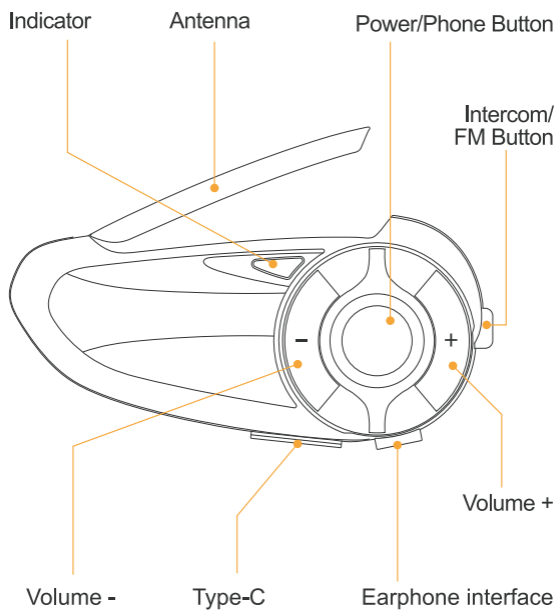


Product Installation

 
1

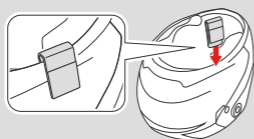


or

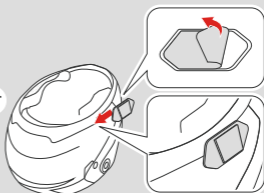 


2

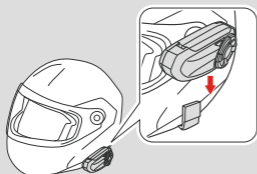 


3

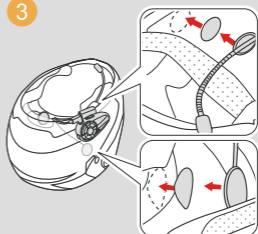 

4

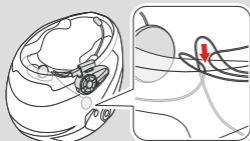 

5

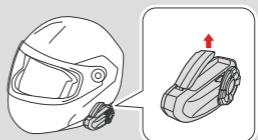 

Product Operations

 
Operation Diagram




Single-click



Double-click

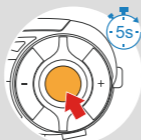


Long press for 5s

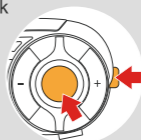 


Simultaneous click

Basic Operations

 Power ON/OFF Please charge it before using.

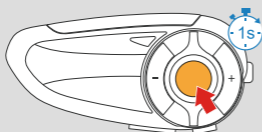

 ON ? Prompt tone
Standby ▾ Blue light flashes slowly

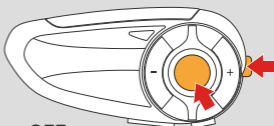


OFF
Press the <Phone Button> and
<Intercom Button> simultaneously.
▾ Lights off

Battery Level




 or

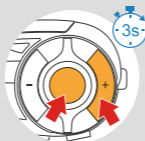


- ? "Battery Level High"
- ? "Battery Level Medium"
- ? "Battery Level Low"

 Low Battery Indication

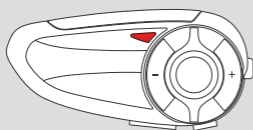

Red light flashes twice
? "Low Battery"

 Charging Indication


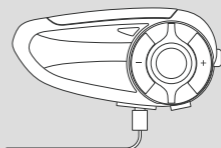


Charging Red light constantly red
Full The red light out


Volume Control

FM and intercom can be used at the same time.

  
Intercom / Calling / Music / FM

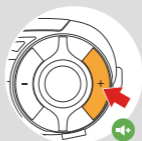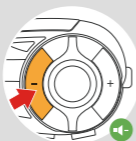

 When Intercom & FM use simultaneously, FM volume control

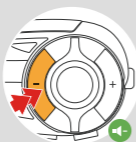

Factory Reset

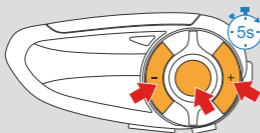 


Long press the <Volume +>, <Volume ->, <Phone Button> for 5s at the same time.

The red and blue lights quickly flash four times simultaneously
? "Restore Default Setting"

Bluetooth Intercom

 Intercom Pairing

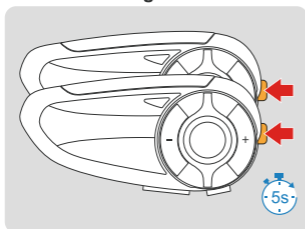

1 Long press the <Intercom Button> for 5s to enter the pairing mode.

Red and blue lights flash fast alternately

? "Intercom Pairing"

 
Searching and paring.

Paring successfully.


? "Intercom Pairing Successful"

Connected, start communication.


Intercom Reconnection

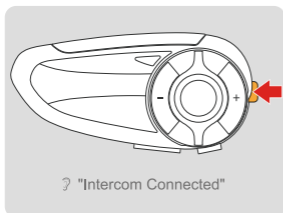

Intercom Disconnection

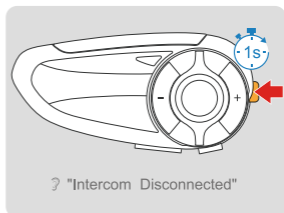 


Compatible with Old Intercom Pairing

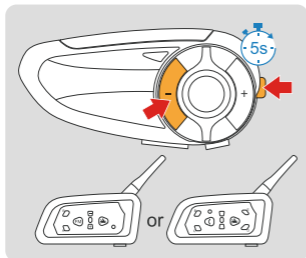 

- 1 Long press both < Volume - > and <Intercom Button> for 5s, while V4/V6 enter the pairing mode.

 Red and blue lights flash fast alternately

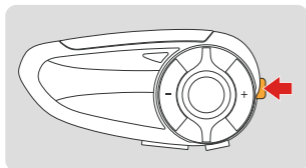


- 2 Click <Intercom Button> enter Bluetooth search mode.

Red and blue lights flash twice alternately

? "Intercom Searching"

Pairing successfully.

 
Blue light flashes slowly

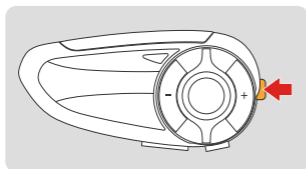

- 3 Click <Intercom Button> to connect.

Pairing of Other Bluetooth Devices

 
This function is not guaranteed to be compatible with all Bluetooth headsets or Bluetooth intercom on the market.

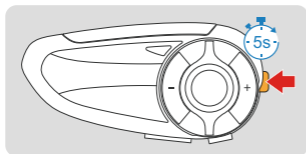

1 Long press the <Intercom Button> for 5s to enter the pairing mode.

Red and blue lights flash fast alternately

 
? "Intercom Pairing"

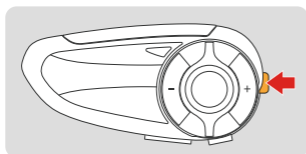

2 Click <Intercom Button> enter Bluetooth search mode.

Red and blue lights flash twice alternately

 ? "Intercom Searching"

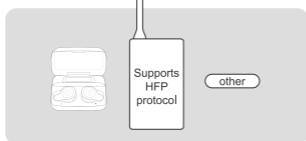


3 Other devices enter Bluetooth search mode.

Pairing successfully.

? "Intercom Pairing Successful"

Bluetooth Pairing

 Phone Pairing

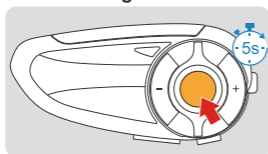


1 Long press the <Phone Button> for 5s to enter the pairing mode.
(If no phone connected, it will exit pairing mode after 2 mins)

Red & blue lights flash fast alternately
? "Phone Pairing"



2 Open your phone's Bluetooth, search and pair with the device.

 Pairing successful. Blue light twice flashes slowly
? "Pairing Successful, Connected"




Current power will be shown on your phone.
(Phone must support HFP)

Phone Reconnection

Automatically connect back to the last paired.

 or

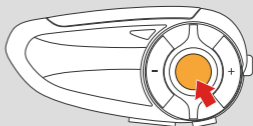


Mobile Phone


Answer a Call

Auto answering within 8s if no any operation.

 
or

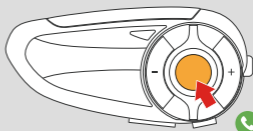


Reject a Call

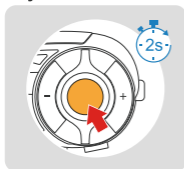 

Last Call Replay

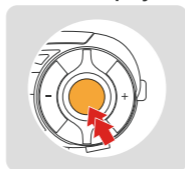 


End a Call

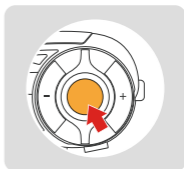 


TEL Priority

 When listening to music/FM/intercom, and receiving a phone call.

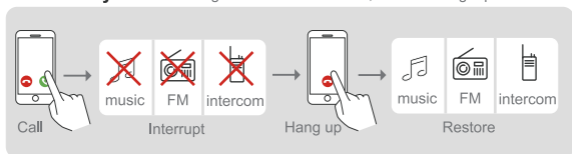


Voice assistant

 Phone must support & open the voice assistant (Google assistant & Siri).


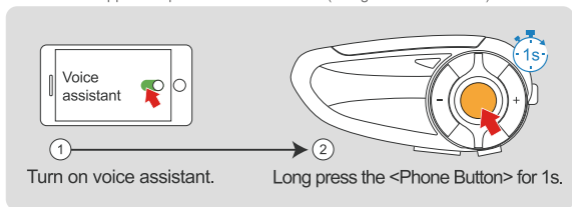


Music Control

 Music Play/Pause

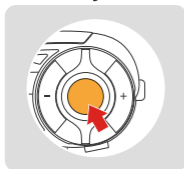

Music Switching

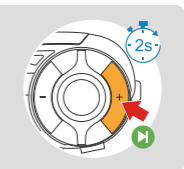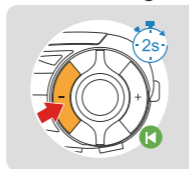  

FM Radio

FM ON/OFF 76~108MHz

Auto search and radio, intercom and radio could working at the same time.



Double click <FM Button> to open FM.

▶ Blue light is always on for 4s

 
▶ Red light double flashes quickly

? "FM Radio"


Double click <FM Button> to close FM.

? "FM Radio Off"

Frequency Switching

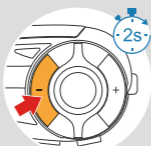


Frequency -

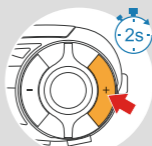 


Frequency +

EUC Remote Control (Optional)

 EUC Details

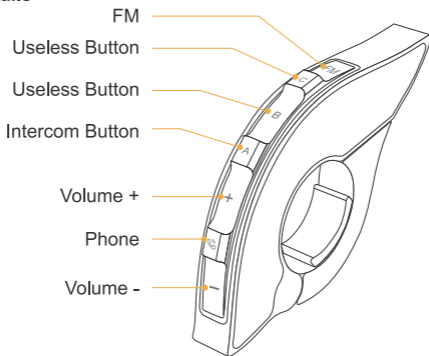


EUC Pairing

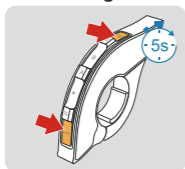 

- ① Long press both <FM Button> and <Volume -> of EUC for 5s to clear the pairing record of EUC.

 ■ Red and Blue lights consistently on

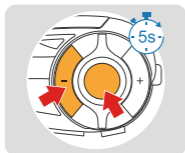

- ② Long press both <Phone Button> and <Volume -> for 5s.

■ Red and blue lights flash alternately and quickly
? "Remote Control Pairing"



- ③ Click any key of EUC.

Pairing Successfully ? "Pairing Successful"

(If EUC cannot be successful paired in 2 mins, it will automatically exit the pairing mode.)

FM ON/OFF



Click <FM Button> to open FM.

Click <FM Button> to close FM.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation