

# EJEAS®

MESH Intercom Expert



More Languages



Referee Mesh Intercom System

 
 
 
# F6 / F6 PRO

## User Manual



Web: [www.ejeas.com](http://www.ejeas.com)

# Product

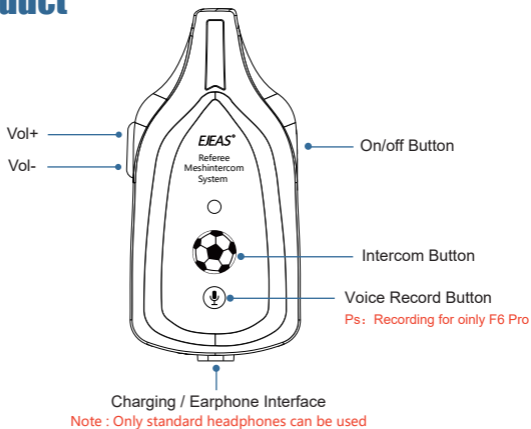

## LED Lights



# Product Models



F6 PRO Referee Intercom



Mesh System



Can connect 6 people, with recording function,  
Super penetrating power,  
Intercom distance reaches 400-800 meters  
in diameter



F6 Referee Intercom



Mesh System



Can connect 6 people, Super penetrating power  
Intercom distance reaches 400-800 meters  
in diameter

## Intercom power on recovery



If you shut down the phone without turning off the intercom, the intercom will automatically resume the next time you turn it on.

## Microphone Mute



Short press the <Intercom Button> to mute the microphone, and it will prompt "Microphone Mute". Short press the <Intercom Button> again to unmute, and it will prompt "Microphone Unmute".

# Operations

## Button Description



Short press/click



Long-press for 1s



Long press for 3s



Long press for 5s

## Basic Operation

On & Off / Battery Level Please fully charging before using



### Power On


Press and hold (about 1s) the <power button> until the blue light flashes and a power-on beep sounds. After powering on, it is in standby mode and the blue light flashes slowly.

- Blue light flashes slowly 🔊 "Di Di Di"

### Power Off

Press and hold (about 1s) the <power button> until you hear the "power off" tone.

Reset: Press the <Power button> + <Intercom button> at the same time.

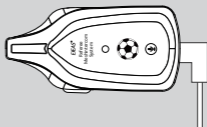

### Battery Level

 
When using USB charging, the red light is always on. When the battery is low, the red light flashes twice quickly and there is a voice prompt of "low battery". When the battery power is too low, the device automatically shuts down.

### Battery Enquiry

Press and hold (about 1s) <plus button> + <minus button>, and the voice will announce the battery level {high/medium/low}.


- Red light flashes quickly 🔊 "Low battery"

# MESH System

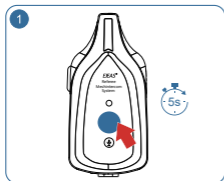


All walkie-talkies first enter the Mesh system intercom pairing state, press and hold the <intercom button> (about 5s) Until you hear the prompt "Mesh system pairing", the red light and blue light flash alternately.

- Red/blue light flashes alternately
- 🔊 "Mesh System Pairing"

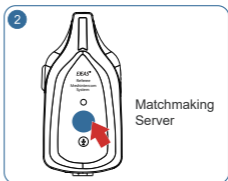

Take one of them as the pairing server, short press the <Intercom Button>, you will hear a "beep" sound and the red and blue lights will flash alternately.

- Red light and blue light flash alternately
- 🔊 "Beep"

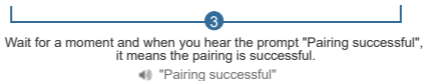

- 4 Wait a moment and hear all the walkie-talkies prompt "Pairing Successful". At this time, pairing has been completed and you can talk to each other and hear each other's voices.

## Mesh intercom reconnection



Short press the <Intercom Button> and it will prompt "Enter Mesh System". After a while, it will prompt "Pairing Successful" and you can start intercom.

## Close Mesh intercom



To turn off Mesh intercom, press and hold the <Intercom key> (about 1s), and it will prompt "Mesh system is shut down".