





More Languages

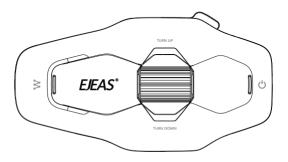



| Certified Model | Version Model | User Manual |
|--------------------|------------------|--------------------------------|
| X10 | 10-Riders | Mesh Groups Intercom System |
| | | ् www.ejeas.com |


Product Introduction

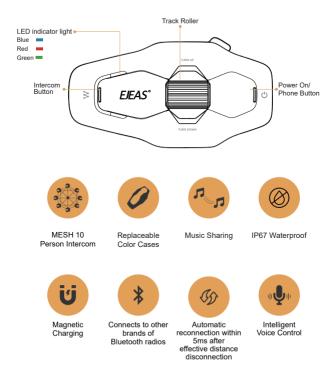



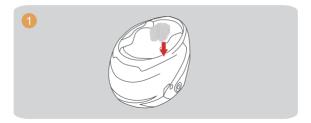

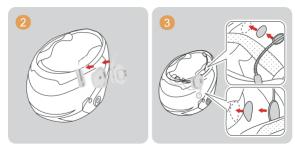

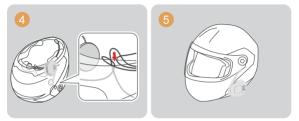


Product Operation

Button Description




Basic Operation

Power on/off Please charge it well before use

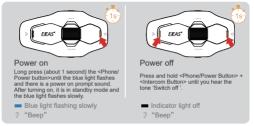

Reset: the machine will automatically switch off when charging, and can be used while charging after switching on.

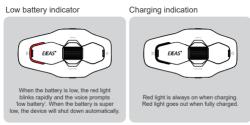

Battery level check: After connecting your mobile phone via Bluetooth, you can see the battery level icon on your mobile phone.

 
Mesh Intercom Function



Mesh intercom is a multi-hop technology mesh network intercom (communication frequency 470-488MHz), the number of intercom, and is not subject to positional restrictions, effective intercom range of personnel can be moved arbitrarily, superior to the traditional chained bluetooth intercom, but also has a longer transmission distance and hetter anti-ammina ability.

Features: Intercom for up to 10 people on 5 channels.

Mesh Microphone Mute



When using Mesh Intercom, you can click <Intercom button> to mute the microphone, so that your own voice will not be sent to others.

? "Microphone Mute"

Click <Intercom Button> again to unmute. ? "Unmute the microphone"

Note: Valid only for Mesh intercom.

Intercom channel switching




There are 5 channels in total, click <Intercom Button> + <Track Roller> to switch channels forward, note that you need the whole team to keep the same channel in order to talk to each other.

When the signal is unstable, you can switch channels to get a better call.

? "Channel n"

Intercom pairing process with group member roles:

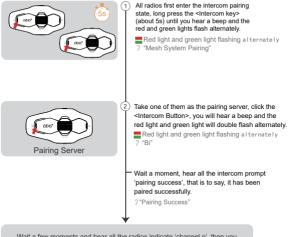

Wait a few moments and hear all the radios indicate 'channel n', then you can talk to each other and hear each other's voices.

Intercom Reconnection




The next time you switch on the power, press the <Track Roller-, it will prompt enter mesh system', wait for a while, it will prompt 'channel in', then you can tak back to each other. If you turn off the power without switching off the intercom, the intercom will be resumed automatically when you turn on the power next time.

Turn off MESH Intercom



To turn off the Mesh intercom, press and hold <Intercom Button> (approx. 1s) and the voice prompts 'Mesh off'.

Bluetooth intercom function for two persons

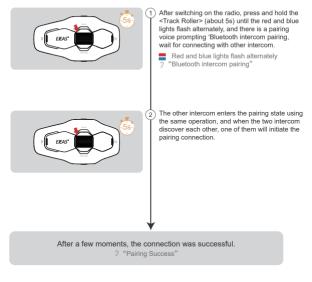

Intercom Connection




Intercom Disconnect



6


Pair headset or other brand Bluetooth intercom search

Note: This feature is not guaranteed to be compatible with all Bluetooth headsets or Bluetooth intercomes on the market.

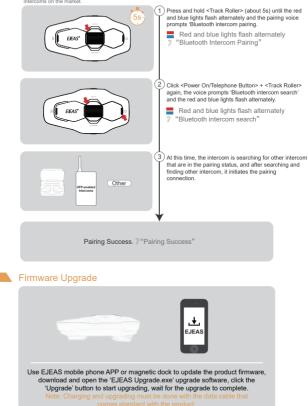

Mobile Phone Pairing

This intercom supports connecting to mobile phones, playing songs and making calls, and waking up voice assistant. Support up to 2 mobile phones to connect at the same time.

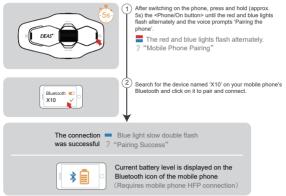


Bluetooth reconnect with mobile phone

After switching on the phone, it automatically connects back to the last Bluetooth of the last mobile phone it was connected to. When there is no connection, click <Phone/On Button-to connect back to the last mobile phone Bluetooth was connected to last time.

Mobile Control

Answer the Phone

 When an incoming call comes in, click <Phone/On Button>.







Music Control



Music Playing



Previous Sona



Click <Track Roller>.

Volume-



Next Song



Click the <Track Roller>. then toggle <Track Roller> backwards then toggle the <Track Roller> forward







Automatically search for radio stations and play them automatically when they are searched for.FM can be turned on during intercom, so that you can listen to the radio while intercom.




Double click the <Track Roller> and the prompt sound will be 'FM radio'.

"FM Radio"


Double-tap <Track Roller>, prompt 'FM radio off '.


Switching Channels

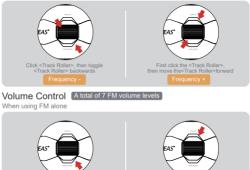

Music Sharing

 Share the music played on your mobile phone's Bluetooth to another device, this function cannot be used when Bluetooth intercom is available. This function cannot be used when two mobile phones have been connected at the same time.

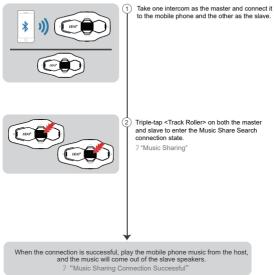




Triple-tap <Track Roller> again to exit music sharing.

? "Music Sharing Connection Disconnected"

Handle EUC (Optional)


Button Description

| Batton Becchption | | | | | |
|-------------------|--------------|--|--|--|--|
| Buttons | Actions | Function | | | |
| Volume + | Short Press | Intercom Volume +/ Music Volume +/ FM Volume + | | | |
| | Long press | Next song when music is playing / When FM is on, tune up | | | |
| | Double click | None | | | |
| Volume - | Short Press | Intercom volume -/ Music volume -/ FM volume - | | | |
| | Long press | Previous song when music is playing / When FM is on, down tuning | | | |
| | Double click | None | | | |
| Phone | Short Press | Answering the phone during an incoming call Hanging up during a call Music play/pause When no cell phone is connected Connect the last connected cell phone | | | |
| Button | Long press | Rejecting calls when they come in Voice assistant | | | |
| | Double click | Last number redial | | | |
| | Short Press | 1. Open Mesh intercom 2.When Mesh is connected, mute/unmute the microphone | | | |
| A Button | Long press | None | | | |
| | Double click | None | | | |
| | Short Press | Turn off Mesh Intercom | | | |
| B Button | Long press | None | | | |
| | Double click | None | | | |

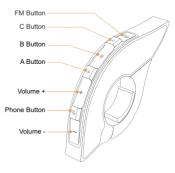

| Buttons | Actions | Function |
|----------------------------|------------------------|---|
| C Button | Short Press | Initiate Bluetooth intercom connection |
| | Long Press | Disconnect the intercom |
| | Double Click | Music sharing on/off |
| FM Button | Short Press | Turn FM on/off |
| Volume - + FM Button | Super Long Press | Clear handle pairing records |

Handle Pairing

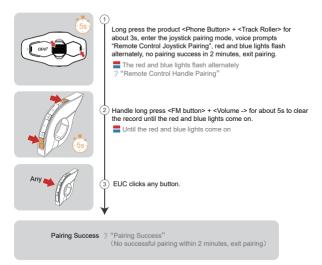


Handle Operation

Mesh intercom reconnect/disconnect and handset controls operate the same as on the machine.






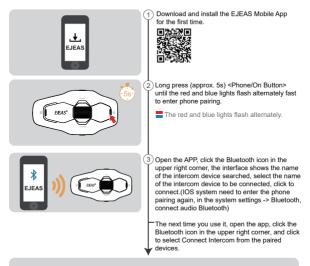

APP provides intercom group, music control, FM control, shutdown, check authenticity and other functions.

 Restore Default Settings



Long press <Phone/On Button> + <Track Roller> for about 5s, the voice prompts "Restore Default Settings", deletes the pairing record, and then automatically reboots the device.

?"Restore Default Settings"

Intelligent voice function

The X10 supports the intelligent voice function, which allows you to control the intercom through the machine's built-in voice phrases. This greatly simplifies the experience and enhances operational efficiency.

Operation method:

Step 1: The Intercom is turned on. The Intelligent Voice function can only be used when the intercom is on. Step 2: Speak the activation phrase into the microphone (see table below for activation phrase). If the activation is successful, you will hera a "droid" sound.

Step 3: After the smart voice is activated, you can control the walkie-talkie according to the smart voice phrase.

| Serial Number | English Version | Functional Description |
|------------------|--------------------------|------------------------|
| 1 | Hey EJEAS | Activate an entry |
| 2 | Answer Call | |
| 3 | Reject Call | |
| 4 | Speed Dial | |
| 5 | Call Redial | |
| 6 | Play Music | |
| 7 | Pause Music | |
| 8 | Previous Song | |
| 9 | Next Song | |
| 10 | Increase Volume | |
| 11 | Decrease Volume | |
| 12 | Increase Intercom Volume | |
| 13 | Decrease Intercom Volume | |
| 14 | Resume Intercom | |
| 15 | Pause Intercom | |
| 16 | Mute Microphone | |
| 17 | Unmute Microphone | |
| 18 | Turn On Voice Assistant | |
| 19 | Turn Off Voice Assistant | |
| 20 | Battery Status | |
| 21 | Turn On FM | |
| 22 | Turn Off FM | |
| 23 | Previous FM Station | |
| 24 | Next FM Station | |
| 25 | Mesh Pairing | |
| 26 | Mesh Pairing Completed | |
| 27 | Turn On Music Share | |
| 28 | Turn Off Music Share | |
| 29 | Previous Channel | |
| 30 | Next Channel | |